

September 1988

# **Software Serial Port Implemented with the PCA**

**BETSY JONES**  
ECO APPLICATIONS ENGINEER

Intel Corporation makes no warranty for the use of its products and assumes no responsibility for any errors which may appear in this document nor does it make a commitment to update the information contained herein

Intel retains the right to make changes to these specifications at any time without notice

Contact your local sales office to obtain the latest specifications before placing your order

The following are trademarks of Intel Corporation and may only be used to identify Intel products

376, 386, 387, 486, 4-SITE, Above, ACE51, ACE96, ACE186, ACE196, ACE960, BITBUS, COMMputer, CREDIT, Data Pipeline, ETOX, Genius, i, i486, i860, ICE, iCEL, ICEVIEW, iCS, iDBP, iDIS, iICE, iLBX, iMDDX, iMMX, Inboard, Insite, Intel, Intel, Intel386, IntelBOS, Intel Certified, Inteleview, intelligent Identifier, intelligent Programming, Inteltec, Intellink, iOSP, iPDS, iPSC, iRMK, iRMX, iSBC, iSBX, iSDM, iSXM, Library Manager, MAPNET, MCS, Megachassis, MICROMAINFRAME, MULTIBUS, MULTICHANNEL, MULTIMODULE, MultiSERVER, ONCE, OpenNET, OTP, PROMPT, Promware, QUEST, QueX, Quick-Erase, Quick-Pulse Programming, Ripplemode, RMX/80, RUPI, Seamless, SLD, SugarCube, UPI, and VLSiCEL, and the combination of ICE, iCS, iRMX, iSBC, iSBX, iSXM, MCS, or UPI and a numerical suffix

MDS is an ordering code only and is not used as a product name or trademark. MDS<sup>®</sup> is a registered trademark of Mohawk Data Sciences Corporation

MULTIBUS is a patented Intel bus

CHMOS and HMOS are patented processes of Intel Corp

Intel Corporation and Intel's FASTPATH are not affiliated with Kinetics, a division of Excelan, Inc. or its FASTPATH trademark or products

Additional copies of this manual or other Intel literature may be obtained from

Intel Corporation  
Literature Sales  
P.O. Box 58130  
Santa Clara, CA 95052-8130

For microcontroller applications which require more than one serial port, the 83C51FA Programmable Counter Array (PCA) can implement additional half-duplex serial ports. If the on-chip UART is being used as an inter-processor link, the PCA can be used to interface the 83C51FA to additional asynchronous lines.

This application uses several different Compare/Capture modes available on the PCA to receive or transmit bytes of data. It is assumed the reader is familiar the PCA and ASM51. For more information on the PCA refer to the "Hardware Description of the 83C51FA" chapter in the Embedded Controller Handbook (Order No. 210918).

## Introduction

The figure below shows the format of a standard 10-bit asynchronous frame: 1 start bit (0), 8 data bits, and 1 stop bit (1). The start bit is used to synchronize the receiver to the transmitter; at the leading edge of the start bit the receiver must set up its timing logic to sample the incoming line in the center of each bit. Following the start bit are eight data bits which are transmitted least significant bit first. The stop bit is set to the opposite state of the start bit to guarantee that the leading edge of the start bit will cause a transition on the line. It also provides a dead time on the line so that the receiver can maintain its synchronization.

Two of the Compare/Capture modes on the PCA are used in receiving and transmitting data bits. When receiving, the Negative-Edge Capture mode allows the PCA to detect the start bit. Then using the Software Timer mode, interrupt., are generated to sample the Incoming data bits. This same mode is used to clock out bits when transmitting.

This Application Note contains four sections of code:

- (1) List of variables
- (2) Initialization routine

- (3) Receive routine
- (4) Transmit routine

A complete listing of the routines and the test loop which was used to verify their operation is found in the Appendix. A total of three half-duplex channels were run at 2400 Baud in the test program. The listings shown here are simplified to one channel (Channel 0).

## Variables

Listing 1 shows the variables used in both the receive and transmit routines. Flags are defined to signify the status of the reception or transmission of a byte (e.g. RCV\_START\_BIT, TXM\_START\_BIT). RCV\_BUF and TXM\_BUF simulate the on-chip serial port SBUF as two separate buffer registers. The temporary registers, RCV\_REG and TXM\_REG, are used to save bits as they are received or transmitted. Finally, two counter registers keep track of how many bits have been received or transmitted.

 
Variables are also needed to define one-half and one-full bit times in units of PCA timer ticks. (One bit time = 1 / baud rate.) With the PCA timer incremented every machine cycle, the equation to calculate one bit time can be written as:

$$\frac{\text{Osc Freq}}{(12) \text{ (baud rate)}} = 1 \text{ bit time (in PCA timer ticks)}$$

In this example, the baud rate is 2400 at 16 MHz.

$$\frac{16\text{MHz}}{(12) \text{ (2400)}} = 556 \text{ counts} \quad 22\text{C Hex}$$

The high and low byte of this value is placed in the variables FULL\_BIT\_HIGH and FULL\_BIT\_LOW, respectively. 115H is the value loaded into HALF\_BIT\_HIGH and HALF\_BIT\_LOW.



270531-1

Listing I. Variables used by the software serial port. Channel 0

```

!

; Receive Routine
RCV_START_BIT_0  BIT      20H.0    ; Indicates start bit
                                   ; has been received
RCV_DONE_0       BIT      20H.1    ; Indicates data byte
                                   ; has been received
RCV_BUF_0        DATA    30H      ; Software Receive
                                   ; "SBUF"
RCV_REG_0        DATA    31H      ; Temporary register
                                   ; for receive bits
RCV_COUNT_0      DATA    32H      ; Counter for receiving
                                   ; bits

; Transmit Routine:
TXM_START_BIT_0  BIT      20H.3    ; Indicates start bit
                                   ; has been transmitted
TXM_IN_PROGRESS_0 BIT      20H.4    ; Indicates transmit is
                                   ; in progress
TXM_BUF_0        DATA    34H      ; Software transmit
                                   ; "SBUF"
TXM_REG_0        DATA    35H      ; Temporary register
                                   ; for transmitting bits
TXM_COUNT_0      DATA    35H      ; Counter for transmit-
                                   ; ting bits
DATA-0          DATA    37H      ; Register used for the
                                   ; test program

NEG_EDGE         EQU      11H      ; Two modes of operation
S_W_TIMER        EQU      49H      ; for compare/capture
                                   ; modules

HALF_BIT_HIGH    EQU      01H      ; Half bit time = 115H
HALF_BIT_LOW     EQU      15H
FULL-BIT-HIGH    EQU      02H      ; Full bit time = 22CH
FULL-BIT-LOW     EQU      2CH      ; 2400 Baud at 16 MHz

```

## Initialization

Listing 2 contains the initialization code for the receive and transmit process. Module 0 of the PCA is used as a receiver and is first set up to detect a negative edge from the start bit. Modules 2 and 3 are used for the additional 2 channels (see the Appendix). Module 3 is used as a separate software timer to transmit bits.

Listing 2. Initialization Routine

```

ORG 0000H
LJMP INITIALIZE
ORG 001BH
LJMP RECEIVE-DONE           ; Timer 1 overflow ~
                             ; simulates "PI" interrupt

ORG 0033H
LJMP RECEIVE               ; PCA interrupt

INITIALIZE: MOV SP, #5FH      ; Initialize stack pointer
                             ; (specific to test program)
INIT_PCA:  MOV CMOD, #00H     ; Increment PCA timer
                             ; @ 1/12 Osc Frequency
                             ; Clear all status flags
                             ; Module 0 in negative-edge
                             ; trigger mode (P1.3)
                             ; Module 3 as software timer
                             ; mode
MOV CCON, #00H
MOV CCAPM0, #NEG_EDGE
MOV CCAPM3, #S_W_TIMER
MOV CL, #00H
MOV CH, #00H
MOV IE, #0D8H              ; Init all needed interrupts
                             ; EA, EC, ES, ET1
SETB CR                    ; Turn on PCA Counter


```

270531-5

All flags and registers from Listing 1 should be cleared in the initialization process.

## Receive Routine

Two operating modes of the PCA are needed to receive bits. The module must first be able to detect the leading edge of a start bit so it is initially set up to capture a 1-to-0 transition (i.e. Negative-Edge Capture mode). The module is then reconfigured as a software timer to cause an interrupt at the center of each bit to deserialize the incoming data. The flowchart for the receive routine is given in Figure 1.

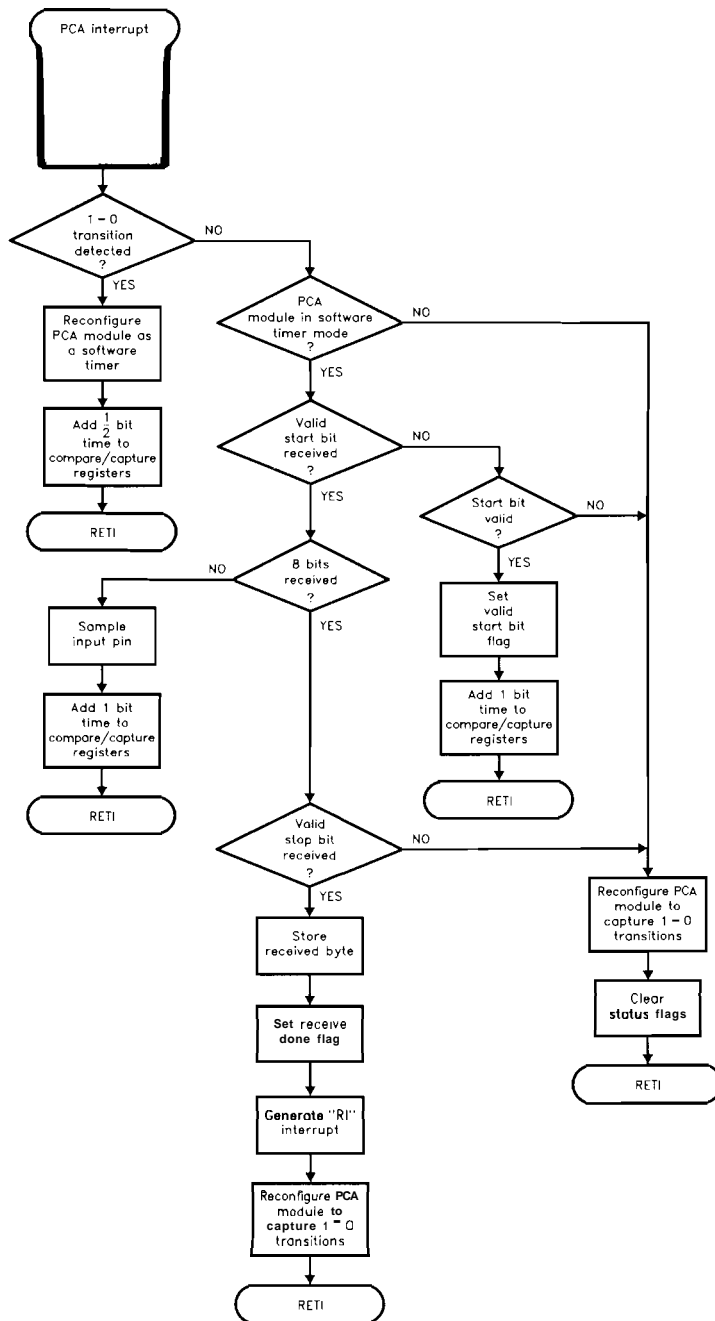

270531-2

Figure 1. Flowchart for the Receive Routine

Listing 3.1 shows the code needed to detect a start bit. Notice that the first software timer interrupt will occur one-half bit time after the leading edge of the start bit to check its validity. If it is valid, the RCV\_START\_BIT is set. The rest of the samples will occur a full bit time later. The RCV\_COUNT register is loaded with a value of 9 which indicates the number of bits to be sampled: 8 data bits and 1 stop bit.

Listing 3.1. Receive Interrupt Routine

```

RECEIVE:  PUSH ACC
          PUSH PSW

MODULE-0: CLR CCFO           ; Assume reception on
          ; Module 0
          MOV A, CCAPMO       ; Check mode of module. It
          ANL A, #01111111B   ; set up to receive negative
          CJNE A, #NEG_EDGE, RCV_START_0 ; edges, then module
          ; is waiting for a start bit

          CLR C               ; Update compare/capture
          MOV A, #HALF_BIT_LOW ; registers for half bit time
          ADD A, CCAPOH       ; to sample start bit
          MOV CCAPOH, A       ; Half bit time = 115H
          MOV A, #HALF_BIT_HIGH
          ADDC A, CCAPOH
          MOV CCAPOH, A
          MOV CCAPMO, #S_W_TIMER ; Reconfigure module 0 as
          POP PSW             ; a software timer to sample
          POP ACC             ; bits
          RETI

;
RCV_START_0: CJNE A, #S_W_TIMER, ERROR-0 ; Check module is
          ; configured as a software
          ; timer. otherwise error.
          JB RCV_START_BIT_0, RCV_BYTE_0 ; Check if start bit
          ; is received yet.
          JB P1.3, ERROR-0             ; Check that start bit = 0,
          ; otherwise error
          SETB RCV_START_BIT_0         ; Signify valid start bit
          ; was received
          MOV RCV_COUNT_0, #09H       ; Start counting bits sampled
          ;

          CLR C                       ; Update compare/capture
          MOV A, #FULL_BIT_LOW        ; registers to sample
          ADD A, CCAPOH               ; incoming bits
          MOV CCAPOH, A               ; Full bit time = 22CH
          MOV A, #FULL-BIT-HIGH
          ADDC A, CCAPOH
          MOV CCAPOH, A
          POP PSW
          POP ACC
          RETI

```

270531-6

The next 8 timer interrupts will receive the incoming data bits: the RCV\_COUNT register keeps track of how many bits have been sampled. As each bit is sampled, it is shifted through the Carry Flag and saved in RCV\_REG. The ninth sample checks the validity of the stop bit. If it is valid the data byte is moved into RCV\_BUF.

The main routine must have a way to know that a byte has been received. With the on-chip UART, the RI (Receive Interrupt) bit is set whenever a byte has been received. For the software serial port, any unimplemented interrupt vector can be used to generate an interrupt when a byte has been received. This routine uses the Timer 1 Overflow interrupt (its selection is arbitrary). A routine to test this interrupt is included in the listing in the Appendix.

### Listing 3.2. Receive Interrupt Routine (Continued)

```
RCV_BYTE_0: DJNZ RCV_COUNT_0, RCV_DATA_0 ; On 9th sample,
; check for valid stop bit
RCV_STOP_0: JNB PI.?, ERROR_0
MOV RCV_BUF_0, RCV_REG_0 ; Save received byte in
; receive "SBUF"
SETB RCV_DONE_0 ; Flag which module received
; a byte
SETB TF1 ; Generate an interrupt so
; main program knows a byte
; has been received
; (Note: selection of TF1 is
; arbitrary)
MOV CCAPMO, #NEG_EDGE ; Reconfigure module 0 for
; Reception of a start bit
POP PSW
POP ACC
RETI

RCV_DATA_0: MOV C, P1.3 ; Sampling data bits
MOV A, RCV_REG_0 ; Shifts bits thru CY into
RRC A ; ACC
MOV RCV_REG_0, A ; Save each reception in
; temporary register
CLR C ; Update c/c register for
; next sample time
MOV A, #FULL-BIT-LOW
ADD A, CCAPOL
MOV CCAPOL, A
MOV A, $FULL-BIT-HIGH
ADDC A, CCAPOH
MOV CCAPOH, A
POP PSW
POP ACC
RETI
```

270531-7

In addition, an error routine (Listing 3.3) is included for invalid start or stop bits to offer some protection against noise. If an error occurs, the module is re-initialized to look for another start bit.

### Listing 3.3 Error Routine for Receive Routine

```
ERROR-G: MOV CCAPMO, #NEG_EDGE ; Resel module to look for
; start bit
CLR RCV_START_BIT_0 ; Clear flags which might
; have been set
POP PSW
POP ACC
RETI
```

270531-8



## Transmit Routine

Another PCA module is configured as a software timer to Interrupt the CPU every bit time. With each timer Interrupt one or more bits can be transmitted through port pins. In the test program three channels were operated simultaneously, but in the listings below, one channel is shown for simplicity. The selection of port pins is user programmable. The flowchart for the transmit routine is given in Figure 2.

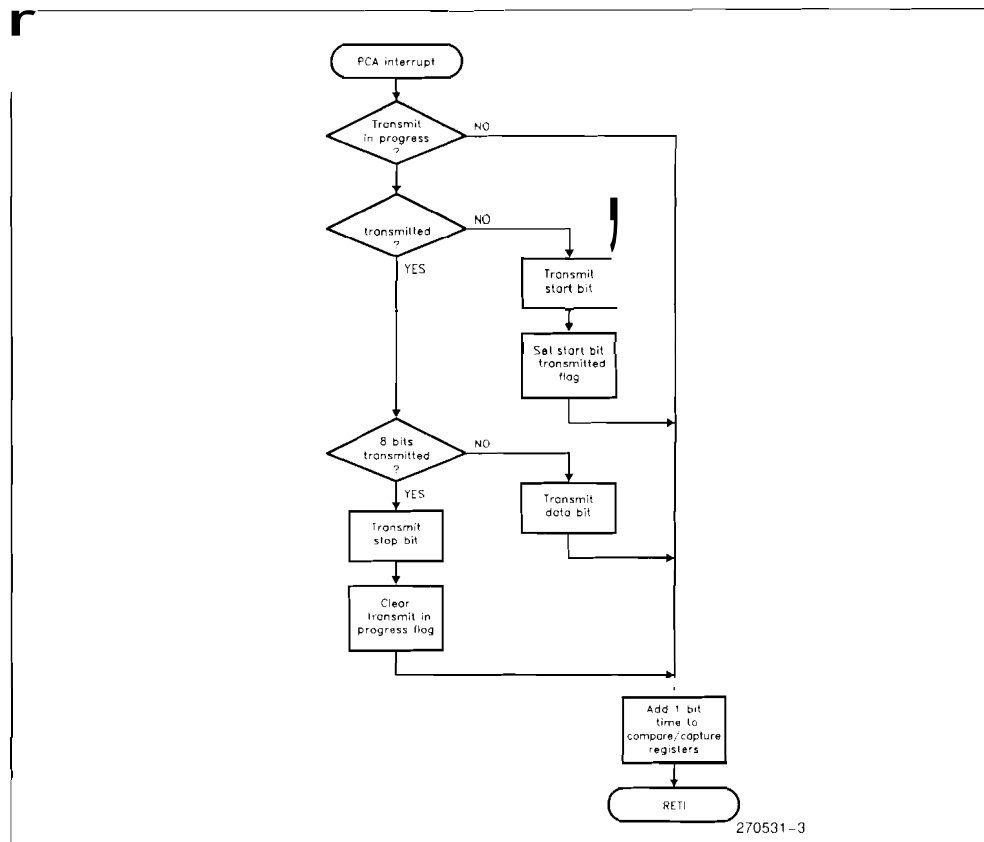


Figure 2. Flowchart for the Transmit Routine

When a byte is ready to be transmitted, the main program moves the data byte into the TXM\_BUF register and sets the corresponding TXM\_IN\_PROGRESS bit. This bit informs the interrupt routine which channel is transmitting. The data byte is then moved into the storage register TXM\_REG, and the TXM\_COUNT is loaded. This main routine is shown in Listing 4.1

Listing 4.1 Transmit Set Up Routine, Channel 0

```

TXM_ON_0: CLR TXM_START_BIT_0    ; Clear status flag from
                                ; previous transmission
MOV TXM_BUF_0, DATA_0          ; Load "SBUF" with data byte
MOV TXM_REG_0, TXM_BUF_0
MOV TXM_COUNT_0, #09            ; 8 data bits + 1 stop bit
SETB TXM_IN_PROGRESS_0
    
```

Listing 4.2 shows the transmit interrupt routine. The first time through, the start bit is transmitted. As each successive interrupt outputs a bit, the contents of TXM\_REG is shifted right one place into the Carry flag, and the TXM — COUNT is decremented. When TXM — COUNT equals zero, the stop bit is transmitted.

Listing 4.2. Transmit Interrupt Routine

```
'TRANSMIT: PUSH ACC
          PUSH PSW
          CLR CCF3                ; Clear s/w timer interrupt
                                   ; for transmitting bits
          JNB TXM_IN_PROGRESS_0, TRANSMIT-1 ; Check which
                                   ; channel is transmitting.
                                   ; "TRANSMIT-1" is listed in
                                   ; the Appendix

TRANSMIT_0: JB TXM_START_BIT_0, TXM_BYTE_0 ; If start bit
                                   ; has been sent, continue
                                   ; transmitting bits.
          CLR P3.2                ; Otherwise transmit start
                                   ; bit
          SETB TXM_START_BIT_0    ; Signify start bit sent
          JMP TXM-EXIT

TXM_BYTE_0: DJNZ TXM_COUNT_0, TXM_DATA_0 ; If bit count
                                   ; equals 1 thru 9, transmit
                                   ; data bits (8 total)

TXM_STOP_0: SETB P3.2            ; When bit count = 0,
                                   ; transmit stop bit
          CLR TXM_IN_PROGRESS_0 ; Indicate transmission is
                                   ; finished and ready for
                                   ; next byte
          JMP TXM-EXIT
;
TXM_DATA_0: MOV A, TXM_REG_0      ; Transmit one bit at a time
          RRC A                  ; through the carry bit
          MOV P3.2, C            ; Save what's not been sent
          MOV TXM_REG_0, A

TXM_EXIT: CLR C                  ; Update compare value with
          MOV A, #FULL-BIT-LOW   ; Full bit time = 22CH
          ADD A, CCAP3L
          MOV CCAP3L, A
          MOV A, #FULL-BIT-HIGH
          ADDC A, CCAP3H
          MOV CCAP3H, A
          POP PSW
          POP ACC
          RETI
```

270531-10

## Conclusion

The software routines in the Appendix can be altered to vary the baud rate and number of channels to fit a particular application. The number of channels which can be implemented is limited by the CPU time required to service the PCA interrupt. At higher baud rates, fewer channels can be run.

The test program verifies the simultaneous operation of three half-duplex channels at 2400 Baud and the on-chip full-duplex channel at 9600 Baud. Thirty-three percent of the CPU time is required to operate all four channels. The test was run for several hours with no apparent malfunctions.

## APPENDIX

01/01/80 PAG

MCS-51 MACRO ASSEMBLER SFWPORT

005 1.20 (C38-N) MCS-51 MACRO ASSEMBLER, V2.2  
 OBJECT MODULES IN SEARCH OF SOURCE FILES  
 ASSEMBLER INVOKED BY: C:\EDIT\ASM51.EXE SFWPORT.RCV

```

LOC OBJ      L:NE      SOURCE
1          1          SNOWMOD51
2          2          SNCSYMBOLS
3          3          $NOLIST
152         152         ;
153         153         ;
154         154         ;
155         155         ;
156         156         ; This program tests the receive routines. c = software serial port.
157         157         ; Three half-duplex channels are implemented in software to run at
158         158         ; 2400 Baud (10MHz). The on-chip serial port is a so running full-duplex
159         159         ; at 9600 Baud. Thirty-three percent of the CPU time is required to run
160         160         ; all four ports simultaneously.
161         161         ; To test the receive routines, "dummy" terminals transmit 00 - FF hex
162         162         ; continually to the PCA. When the first byte is received it is
163         163         ; compared with 00. If the comparison is valid, the compare value is
164         164         ; incremented and the routine waits to receive the next byte. Error
165         165         ; routines toggle variables for pins if an invalid comparison occurs
166         166         ; or if an invalid start bit or stop bit is received.
167         167         ;
168         168         ORG 00H
169         169         LAMP INITIALIZE
170         170         ;
171         171         ORG 001BH
172         172         LAMP RECEIVE_DONE
173         173         ; Timer 1 Over flow - simulate RI
174         174         ORG 0022H
175         175         LAMP SERIAL_PORT
176         176         ; Serial port interrupt
177         177         ORG 0033H
178         178         LAMP RECEIVE
179         179         ; PCA interrupt
180         180         ;
181         181         ;
182         182         ;
183         183         ;
184         184         ;
185         185         ;
186         186         ;
187         187         ;
188         188         ;
189         189         ;
190         190         ;
191         191         ;
192         192         ;
193         193         ;
194         194         ;
195         195         ;
196         196         ;
197         197         ;
198         198         ;
199         199         ;
200         200         ;
201         201         ;
202         202         ;
203         203         ;
204         204         ;
205         205         ;
206         206         ;
207         207         ;
208         208         ;
209         209         ;
210         210         ;
211         211         ;
212         212         ;
213         213         ;
214         214         ;
215         215         ;
216         216         ;
217         217         ;
218         218         ;
219         219         ;
220         220         ;
221         221         ;
222         222         ;
223         223         ;
224         224         ;
225         225         ;
226         226         ;
227         227         ;
228         228         ;
229         229         ;
230         230         ;
231         231         ;
232         232         ;
233         233         ;
234         234         ;
235         235         ;
236         236         ;
237         237         ;
238         238         ;
239         239         ;
240         240         ;
241         241         ;
242         242         ;
243         243         ;
244         244         ;
245         245         ;
246         246         ;
247         247         ;
248         248         ;
249         249         ;
250         250         ;
251         251         ;
252         252         ;
253         253         ;
254         254         ;
255         255         ;
256         256         ;
257         257         ;
258         258         ;
259         259         ;
260         260         ;
261         261         ;
262         262         ;
263         263         ;
264         264         ;
265         265         ;
266         266         ;
267         267         ;
268         268         ;
269         269         ;
270         270         ;
271         271         ;
272         272         ;
273         273         ;
274         274         ;
275         275         ;
276         276         ;
277         277         ;
278         278         ;
279         279         ;
280         280         ;
281         281         ;
282         282         ;
283         283         ;
284         284         ;
285         285         ;
286         286         ;
287         287         ;
288         288         ;
289         289         ;
290         290         ;
291         291         ;
292         292         ;
293         293         ;
294         294         ;
295         295         ;
296         296         ;
297         297         ;
298         298         ;
299         299         ;
300         300         ;
301         301         ;
302         302         ;
303         303         ;
304         304         ;
305         305         ;
306         306         ;
307         307         ;
308         308         ;
309         309         ;
310         310         ;
311         311         ;
312         312         ;
313         313         ;
314         314         ;
315         315         ;
316         316         ;
317         317         ;
318         318         ;
319         319         ;
320         320         ;
321         321         ;
322         322         ;
323         323         ;
324         324         ;
325         325         ;
326         326         ;
327         327         ;
328         328         ;
329         329         ;
330         330         ;
331         331         ;
332         332         ;
333         333         ;
334         334         ;
335         335         ;
336         336         ;
337         337         ;
338         338         ;
339         339         ;
340         340         ;
341         341         ;
342         342         ;
343         343         ;
344         344         ;
345         345         ;
346         346         ;
347         347         ;
348         348         ;
349         349         ;
350         350         ;
351         351         ;
352         352         ;
353         353         ;
354         354         ;
355         355         ;
356         356         ;
357         357         ;
358         358         ;
359         359         ;
360         360         ;
361         361         ;
362         362         ;
363         363         ;
364         364         ;
365         365         ;
366         366         ;
367         367         ;
368         368         ;
369         369         ;
370         370         ;
371         371         ;
372         372         ;
373         373         ;
374         374         ;
375         375         ;
376         376         ;
377         377         ;
378         378         ;
379         379         ;
380         380         ;
381         381         ;
382         382         ;
383         383         ;
384         384         ;
385         385         ;
386         386         ;
387         387         ;
388         388         ;
389         389         ;
390         390         ;
391         391         ;
392         392         ;
393         393         ;
394         394         ;
395         395         ;
396         396         ;
397         397         ;
398         398         ;
399         399         ;
400         400         ;
401         401         ;
402         402         ;
403         403         ;
404         404         ;
405         405         ;
406         406         ;
407         407         ;
408         408         ;
409         409         ;
410         410         ;
411         411         ;
412         412         ;
413         413         ;
414         414         ;
415         415         ;
416         416         ;
417         417         ;
418         418         ;
419         419         ;
420         420         ;
421         421         ;
422         422         ;
423         423         ;
424         424         ;
425         425         ;
426         426         ;
427         427         ;
428         428         ;
429         429         ;
430         430         ;
431         431         ;
432         432         ;
433         433         ;
434         434         ;
435         435         ;
436         436         ;
437         437         ;
438         438         ;
439         439         ;
440         440         ;
441         441         ;
442         442         ;
443         443         ;
444         444         ;
445         445         ;
446         446         ;
447         447         ;
448         448         ;
449         449         ;
450         450         ;
451         451         ;
452         452         ;
453         453         ;
454         454         ;
455         455         ;
456         456         ;
457         457         ;
458         458         ;
459         459         ;
460         460         ;
461         461         ;
462         462         ;
463         463         ;
464         464         ;
465         465         ;
466         466         ;
467         467         ;
468         468         ;
469         469         ;
470         470         ;
471         471         ;
472         472         ;
473         473         ;
474         474         ;
475         475         ;
476         476         ;
477         477         ;
478         478         ;
479         479         ;
480         480         ;
481         481         ;
482         482         ;
483         483         ;
484         484         ;
485         485         ;
486         486         ;
487         487         ;
488         488         ;
489         489         ;
490         490         ;
491         491         ;
492         492         ;
493         493         ;
494         494         ;
495         495         ;
496         496         ;
497         497         ;
498         498         ;
499         499         ;
500         500         ;
501         501         ;
502         502         ;
503         503         ;
504         504         ;
505         505         ;
506         506         ;
507         507         ;
508         508         ;
509         509         ;
510         510         ;
511         511         ;
512         512         ;
513         513         ;
514         514         ;
515         515         ;
516         516         ;
517         517         ;
518         518         ;
519         519         ;
520         520         ;
521         521         ;
522         522         ;
523         523         ;
524         524         ;
525         525         ;
526         526         ;
527         527         ;
528         528         ;
529         529         ;
530         530         ;
531         531         ;
532         532         ;
533         533         ;
534         534         ;
535         535         ;
536         536         ;
537         537         ;
538         538         ;
539         539         ;
540         540         ;
541         541         ;
542         542         ;
543         543         ;
544         544         ;
545         545         ;
546         546         ;
547         547         ;
548         548         ;
549         549         ;
550         550         ;
551         551         ;
552         552         ;
553         553         ;
554         554         ;
555         555         ;
556         556         ;
557         557         ;
558         558         ;
559         559         ;
560         560         ;
561         561         ;
562         562         ;
563         563         ;
564         564         ;
565         565         ;
566         566         ;
567         567         ;
568         568         ;
569         569         ;
570         570         ;
571         571         ;
572         572         ;
573         573         ;
574         574         ;
575         575         ;
576         576         ;
577         577         ;
578         578         ;
579         579         ;
580         580         ;
581         581         ;
582         582         ;
583         583         ;
584         584         ;
585         585         ;
586         586         ;
587         587         ;
588         588         ;
589         589         ;
590         590         ;
591         591         ;
592         592         ;
593         593         ;
594         594         ;
595         595         ;
596         596         ;
597         597         ;
598         598         ;
599         599         ;
600         600         ;
601         601         ;
602         602         ;
603         603         ;
604         604         ;
605         605         ;
606         606         ;
607         607         ;
608         608         ;
609         609         ;
610         610         ;
611         611         ;
612         612         ;
613         613         ;
614         614         ;
615         615         ;
616         616         ;
617         617         ;
618         618         ;
619         619         ;
620         620         ;
621         621         ;
622         622         ;
623         623         ;
624         624         ;
625         625         ;
626         626         ;
627         627         ;
628         628         ;
629         629         ;
630         630         ;
631         631         ;
632         632         ;
633         633         ;
634         634         ;
635         635         ;
636         636         ;
637         637         ;
638         638         ;
639         639         ;
640         640         ;
641         641         ;
642         642         ;
643         643         ;
644         644         ;
645         645         ;
646         646         ;
647         647         ;
648         648         ;
649         649         ;
650         650         ;
651         651         ;
652         652         ;
653         653         ;
654         654         ;
655         655         ;
656         656         ;
657         657         ;
658         658         ;
659         659         ;
660         660         ;
661         661         ;
662         662         ;
663         663         ;
664         664         ;
665         665         ;
666         666         ;
667         667         ;
668         668         ;
669         669         ;
670         670         ;
671         671         ;
672         672         ;
673         673         ;
674         674         ;
675         675         ;
676         676         ;
677         677         ;
678         678         ;
679         679         ;
680         680         ;
681         681         ;
682         682         ;
683         683         ;
684         684         ;
685         685         ;
686         686         ;
687         687         ;
688         688         ;
689         689         ;
690         690         ;
691         691         ;
692         692         ;
693         693         ;
694         694         ;
695         695         ;
696         696         ;
697         697         ;
698         698         ;
699         699         ;
700         700         ;
701         701         ;
702         702         ;
703         703         ;
704         704         ;
705         705         ;
706         706         ;
707         707         ;
708         708         ;
709         709         ;
710         710         ;
711         711         ;
712         712         ;
713         713         ;
714         714         ;
715         715         ;
716         716         ;
717         717         ;
718         718         ;
719         719         ;
720         720         ;
721         721         ;
722         722         ;
723         723         ;
724         724         ;
725         725         ;
726         726         ;
727         727         ;
728         728         ;
729         729         ;
730         730         ;
731         731         ;
732         732         ;
733         733         ;
734         734         ;
735         735         ;
736         736         ;
737         737         ;
738         738         ;
739         739         ;
740         740         ;
741         741         ;
742         742         ;
743         743         ;
744         744         ;
745         745         ;
746         746         ;
747         747         ;
748         748         ;
749         749         ;
750         750         ;
751         751         ;
752         752         ;
753         753         ;
754         754         ;
755         755         ;
756         756         ;
757         757         ;
758         758         ;
759         759         ;
760         760         ;
761         761         ;
762         762         ;
763         763         ;
764         764         ;
765         765         ;
766         766         ;
767         767         ;
768         768         ;
769         769         ;
770         770         ;
771         771         ;
772         772         ;
773         773         ;
774         774         ;
775         775         ;
776         776         ;
777         777         ;
778         778         ;
779         779         ;
780         780         ;
781         781         ;
782         782         ;
783         783         ;
784         784         ;
785         785         ;
786         786         ;
787         787         ;
788         788         ;
789         789         ;
790         790         ;
791         791         ;
792         792         ;
793         793         ;
794         794         ;
795         795         ;
796         796         ;
797         797         ;
798         798         ;
799         799         ;
800         800         ;
801         801         ;
802         802         ;
803         803         ;
804         804         ;
805         805         ;
806         806         ;
807         807         ;
808         808         ;
809         809         ;
810         810         ;
811         811         ;
812         812         ;
813         813         ;
814         814         ;
815         815         ;
816         816         ;
817         817         ;
818         818         ;
819         819         ;
820         820         ;
821         821         ;
822         822         ;
823         823         ;
824         824         ;
825         825         ;
826         826         ;
827         827         ;
828         828         ;
829         829         ;
830         830         ;
831         831         ;
832         832         ;
833         833         ;
834         834         ;
835         835         ;
836         836         ;
837         837         ;
838         838         ;
839         839         ;
840         840         ;
841         841         ;
842         842         ;
843         843         ;
844         844         ;
845         845         ;
846         846         ;
847         847         ;
848         848         ;
849         849         ;
850         850         ;
851         851         ;
852         852         ;
853         853         ;
854         854         ;
855         855         ;
856         856         ;
857         857         ;
858         858         ;
859         859         ;
860         860         ;
861         861         ;
862         862         ;
863         863         ;
864         864         ;
865         865         ;
866         866         ;
867         867         ;
868         868         ;
869         869         ;
870         870         ;
871         871         ;
872         872         ;
873         873         ;
874         874         ;
875         875         ;
876         876         ;
877         877         ;
878         878         ;
879         879         ;
880         880         ;
881         881         ;
882         882         ;
883         883         ;
884         884         ;
885         885         ;
886         886         ;
887         887         ;
888         888         ;
889         889         ;
890         890         ;
891         891         ;
892         892         ;
893         893         ;
894         894         ;
895         895         ;
896         896         ;
897         897         ;
898         898         ;
899         899         ;
900         900         ;
901         901         ;
902         902         ;
903         903         ;
904         904         ;
905         905         ;
906         906         ;
907         907         ;
908         908         ;
909         909         ;
910         910         ;
911         911         ;
912         912         ;
913         913         ;
914         914         ;
915         915         ;
916         916         ;
917         917         ;
918         918         ;
919         919         ;
920         920         ;
921         921         ;
922         922         ;
923         923         ;
924         924         ;
925         925         ;
926         926         ;
927         927         ;
928         928         ;
929         929         ;
930         930         ;
931         931         ;
932         932         ;
933         933         ;
934         934         ;
935         935         ;
936         936         ;
937         937         ;
938         938         ;
939         939         ;
940         940         ;
941         941         ;
942         942         ;
943         943         ;
944         944         ;
945         945         ;
946         946         ;
947         947         ;
948         948         ;
949         949         ;
950         950         ;
951         951         ;
952         952         ;
953         953         ;
954         954         ;
955         955         ;
956         956         ;
957         957         ;
958         958         ;
959         959         ;
960         960         ;
961         961         ;
962         962         ;
963         963         ;
964         964         ;
965         965         ;
966         966         ;
967         967         ;
968         968         ;
969         969         ;
970         970         ;
971         971         ;
972         972         ;
973         973         ;
974         974         ;
975         975         ;
976         976         ;
977         977         ;
978         978         ;
979         979         ;
980         980         ;
981         981         ;
982         982         ;
983         983         ;
984         984         ;
985         985         ;
986         986         ;
987         987         ;
988         988         ;
989         989         ;
990         990         ;
991         991         ;
992         992         ;
993         993         ;
994         994         ;
995         995         ;
996         996         ;
997         997         ;
998         998         ;
999         999         ;
1000        1000        ;

```

270531-11

UCS-51 MICRO ASSEMBLER      SWPORT

01/01/80      PAGE      2

```

LOC  OBJ      LINE      SOURCE
0030      199      RCV_BUF_0          DATA      308      ; Software receive "SBUF"
0040      200      RCV_BUF_1          DATA      40H
0050      201      RCV_BUF_2          DATA      50H
0031      203      RCV_REG_0          DATA      31H      ; Temporary register for
0041      204      RCV_REG_1          DATA      41H      ; receiving bits
0051      205      RCV_REG_2          DATA      51H
0032      206      RCV_COUNT_0        DATA      32H      ; Counter for receiving bits
0042      207      RCV_COUNT_1        DATA      42H
0052      208      RCV_COUNT_2        DATA      52H
0033      211      COUNT_0            DATA      33H      ; Used in test program to check
0043      212      COUNT_1            DATA      43H      ; bytes being received
0053      213      COUNT_2            DATA      53H
0011      215      NEG_EDGE           EQU         11H      ; Two modes of operation for the
0049      216      S_WTIMER           EQU         49H      ; Compare/Capture modules
0015      218      HALF_BIT_LOW       EQU         15H      ; Half bit time = 115H
0061      219      HALF_BIT_HIGH      EQU         01H
002C      220      FULL_BIT_LOW       EQU         2CH      ; Full bit time = 22CH
0002      221      FULL_BIT_HIGH      EQU         02H      ; 2400 Baud @ 16MHz
0002      222
0002      223      ;
0002      224      ;
0002      225      ;
0002      226      ;
0002      227      ;
0002      228      ;
0002      229      ;
0002      230      ;
0002      231      ;
0036 75815F      INIT_PCA:      MOV SP, #5FH      ; Initialize stack pointer
0039 75D900      MOV CMOD, #00H      ; Independent port mode
003C 75D800      MOV CCON, #00H      ; Clear all status flags
003F 75DA11      MOV CCAPM0, #NEG_EDGE      ; module 0 in Neg-edge capture mode (Pl.3)
0042 75DB11      MOV CCAPM1, #NEG_EDGE      ; module 1 (Pl.4)
0045 75DC11      MOV CCAPM2, #NEG_EDGE      ; module 2 (Pl.5)
0048 75E900      MOV CL, #00H
004B 75F900      MOV CH, #00H
004E 75A8D8      MOV IE, #0D8H      ; Initialize needed interrupt: EA, EC, ES, ET1
0051 D2DE      SETB CR      ; Turn on PCA counter
0053 759850      INIT_SP:      MOV SCON, #50H      ; Serial port in mode 1 18-Bit UART)
0056 75CBFF      MOV RCAP2H, #0FFH      ; Reload values for 9600 Baud @ 16 MHz
0059 75CACC      MOV RCAP2L, #0CCH
005C 75C834      MOV T2CON, #34H      ; Timer 2 as a baud-rate generator,
005F C200      ; turn on timer 2
0061 C208      INIT_FLAGS:      CLR RCV_START_BIT_0
0063 C210      CLR RCV_START_BIT_1
0065 C201      CLR RCV_START_BIT_2
0065 C201      CLR RCV_DONE_0

```

```

01/01/80 PAGE
NCS I O ASSEMBLER SUPPORT SOURCE LINE
; CLR RCV_DONE_1
; CLR RCV_DONE_2
; CLR RCV_ON_0
; CLR RCV_ON_1
; CLR RCV_ON_2
; Port 3 pins used in test program for error routines
; Main program:
;   SETB P3.2 ; Error in comparison on module 0
;   SETB P3.3 ; Error in comparison on module 1
;   SETB P3.4 ; Error in comparison on module 2
; Interrupt routines:
;   SETB P3.5 ; Error in reception on module 0
;   SETB P3.6 ; Error in reception on module 1
;   SETB P3.7 ; Error in reception on module 2
MOV RCV_BUF_0, #00H
MOV RCV_BUF_1, #00H
MOV RCV_BUF_2, #00H
MOV RCV_COUNT_0, #00H
MOV RCV_COUNT_1, #00H
MOV RCV_COUNT_2, #00H
MOV RCV_REG_0, #00H
MOV RCV_REG_1, #00H
MOV RCV_REG_2, #00H
MOV COUNT_0, #00H
MOV COUNT_1, #00H
MOV COUNT_2, #00H
MAIN TEST ROUTINE - RECEIVE BITS
=====
CHECK_0:
JNB RCV_ON_0, CHECK_1
MOV A, RCV_BUF_0
CJNE A, COUNT_0, ERROR0
CLR RCV_ON_0
INC COUNT_0
CHECK_1:
JNB RCV_ON_1, CHECK_2
MOV A, RCV_BUF_1
CJNE A, COUNT_1, ERROR1
CLR RCV_ON_1
INC COUNT_1
CHECK_2:
JNB RCV_ON_2, CHECK_0
MOV A, RCV_BUF_2
CJNE A, COUNT_2, ERROR2

```

MCS-51 MACRO ASSEMBLER SWPORT

01/01/80 PAGE 4

```

LOC OBJ          LINE    SOURCE
00C1 C212        309      CLR RCV_ON_2
00C3 0553        310      INC COUNT_2
00C5 80DA        311      JHP CHECK_0
                   312
00C7 C2B2        313      ERROR0: CLR P3.2           ; Error in comparison on module 0
00C9 75DA00      314      MOV CCAPM0, #00H      ; Discontinue receiving bytes
00CC 80DF        315      JUP CHECK_1
                   316
00CE C2B3        311      ERROR1: CLR P3.3           ; Error in comparison on module 1
00D0 75DB00      318      MOV CCAPM1, #00H
00D3 80E4        319      JMP CHECK_2
                   320
00D5 C2B4        321      ERROR2: CLR P3.4           ; Error in comparison on module 2
00D7 75DC00      322      MOV CCAPM2, #00H
00DA 80C5        323      JMP CHECK_0
                   324
                   325 ;
                   326 ;
                   327 ;
                   328 ;
                   329 ;
                   330 PCA_INTERRUPT ROUTINE - RECEIVE BITS
                   331 =====
00DC C0F0        330      RECEIVE: PUSH ACC
00DE C0D0        331      PUSH PSW
                   332 ;
00E0 20D811      333      JB CCF0, MODULE_0      ; Check which module caused
00E3 20D908      334      JB CCF1, JUMP_1      ; PCA Interrupt and jump to
00E6 20DA08      335      JB CCF2, JUMP_2      ; appropriate routine
00E9 D0D0        336      POP PSW
00EB D0E0        337      POP ACC
00ED 32          338      RETI
                   339 ;
00EE 02016C      340      JUMP_1: LJMP MODULE_1
00F1 0201E4      341      JUMP_2: LJMP MODULE_2
                   342 ;
                   343 ;
                   344 ;
                   345 ;
                   346 ;
                   347 CHANNEL 0
                   348 =====
00F4 C2D8        348      MODULE_0: CLR CCF0           ; Reception on module 0
00F6 E5DA        349      MOV A, CCAPH0      ; Check mode of module. If set up to
00F8 541F        350      ANL A, #01111111B  ; receive negative edges, then module
00FA B41115      351      CUNE A, #NEG_EDGE, RCV_START_0 ; is waiting for a start bit
                   352 ;
00FD C3          353      CLR C           ; Update Compare/Capture registers for
00FE 7415        354      MOV A, #HALF_BIT_LOW ; half a bit time
0100 25EA        355      ADD A, CCAP0L      ; to sample start bit
0102 F5EA        356      MOV CCAP0L, A      ; Half bit time = 115H
0104 1401        357      MOV A, #HALF_BIT_HIGH
0106 35FA        358      ADDC A, CCAP0H
0108 F5FA        359      MOV CCAP0H, A
010A 75DA49      360      MOV CCAPM0, #S_W_TIMER ; Reconfigure module 0 as
                   361 ; a software timer to sample bits
010D D0D0        362      POP PSW
010F D0E0        363      POP ACC

```

2705=====31-14

```

LOC OBJ      LINE      SOURCE
0111 32       364       REII
0112 B4494B   361
0112 B4494B   366       RCV_START_0: CJNE A, #S_W_TIMER, ERROR_0 ; Check module is configured
0115 20001A   361       ; as a software timer, otherwise error
0115 20001A   366       JB RCV_START_BIT_0, RCV_BYTE_0 ; Check if start bit
0118 209345   368       ; has been received yet
0118 209345   369       JB P1.3, ERROR_0 ; Check that start bit = 0,
0118 209345   370       ; otherwise error.
011B D200     372       SETB RCV_START_BIT_0 ; Signify valid start bit
011B D200     373       ; was received
011D 753209   374       MOV RCV_COUNT_0, #09H ; Start counting bits sampled
0120 C3       375
0121 142C     376       CLR C ; Update C/C registers to sample
0121 142C     377       MOV A, #FULL_BIT_LOU ; incoming bits
0123 255A     378       ADD A, CCAPOL ; Full bit time = 22CH
0125 F5EA     379       MOV CCAPOL, A
0127 7402     380       MOV A, #FULL_BIT_HIGH
0129 35FA     381       ADDC A, CCAPOH
012B F5FA     382       MOV CCAPOH, A
012D D0D0     383       POP PSY
012F D0E0     384       POP ACC
0131 32       385       RETI
0132 D53212   386       ;
0132 D53212   387       RCV_BYTE_0: DJNZ RCV_COUNT_0, RCV_DATA_0 ; On1dthssamppbit check for
0135 309328   388
0135 309328   389       RCV_STOP_0: JNB P1.3, ERROR_0
0138 853130   390       MOV RCV_BUF_0, RCV_REG_0 ; Save received byte in receive "SBUF"
0138 853130   391       SETB RCV_DONE_0 ; Flag which module received a byte
013B D201     392       SETB TFI ; Generate an interrupt so main program
013D D20F     393       ; knows a byte has been received
013F 75DA11   394       MOV CCAPM0, #NEG_EDGE ; (NOTE: selection of TFI is arbitrary)
0142 D0D0     395       POP PSW ; Reconfigure module 0 for next
0144 D0E0     396       POP ACC ; reception of a start bit
0146 32       397       RETI
0147 A293     398
0147 A293     399       RCV_DATA_0: MOV C, P1.3 ; Sampling data bits
0149 E531     400       MOV A, RCV_REG_0 ; Shift bits through CY into ACC
014B 13       401       RRC A
014C F531     402       MOV RCV_REG_0, A ; Save each reception in temporary
014E C3       403       ; register
014E C3       404       CLR C
014F 142C     405       MOV A, #FULL_BIT_LOW ; Update C/C register for next
0151 25EA     406       ADD A, CCAPOL ; sample time
0153 F5EA     407       MOV CCAPOL, A
0155 1402     408       MOV A, #FULL_BIT_HIGH
0157 35FA     409       ADDC A, CCAPOH
0159 F5FA     410       MOV CCAPOH, A
015B D0D0     411       POP PSW
015D D0E0     412       POP ACC
015F 32       413       RETI
0160 C2B5     414       ;
0160 C2B5     415       ERROR_0: CLR P3.5 ; Error routine for invalid start or
0160 C2B5     416       ; stop bit or invalid made comparison
0160 C2B5     417

```

## MCS-51 MACRO ASSEMBLER SWPORT

01/01/80 PAGE 6

LOC	OBJ	LINE	SOURCE	
		418		
0162	75DA11	419		
0165	C200	420	MOV CCAPM0, #NEG_EDGE	Port pin used For debug only
0167	D0D0	421	CLR RCV_START_BIT_0	Reset module to look for start bit
0169	D0D0	422	POP PSW	Clear flags which might have been set
016B	32	423	POP ACC	
		424	RETI	
		425		
		426	CHANNEL 1	
		427	-----	
		428		
016C	C209	429	MODULE_1: CLR CCF1	; similar to module 0
016E	E5DB	430	MOV A, CCAPM1	
0170	547F	431	ANL A, #01111111B	
0172	B41115	432	CJNE A, #NEG_EDGE, RCV_START_1	
		433		
0175	C3	434	CLR C	
0176	7415	435	MOV A, #HALF_BIT-LOW	
0178	25EB	436	ADD A, CCAP1L	
017A	F5EB	437	MOV CCAP1L, A	
017C	7401	438	MOV A, #HALF_BIT-HIGH	
017E	35FB	439	ADDC A, CCAPTH	
0180	F5FB	440	MOV CCAP1H, A	
0182	75DB49	441	MOV CCAPM1, #S_W_TIMER	
0185	D0D0	442	POP PSY	
0187	D0D0	443	POP ACC	
0189	32	444	RETI	
		445		
018A	B4494B	446	RCV_START_1: CJNE A, #S_W_TIMER, ERROR_1	
018D	20081A	447	JB RCV_START_BIT_1, RCV_BYTE_1	
0190	209445	448	JB P1.4, ERROR-1-	
		449		
0193	D208	450	SETB RCV_START_BIT_1	
0195	754209	451	MOV RCV_COUNT_1, #09H	
		452		
		453		
0198	C3	454	CLR C	
0199	142C	455	MOV A, #FULL_BIT-LOW	
019B	25EB	456	ADD A, CCAP1L	
019D	F5EB	457	MOV CCAP1L, A	
019F	7402	458	MOV A, #FULL_BIT-HIGH	
01A1	35FB	459	ADDC A, CCAP1H	
01A3	F5FB	460	MOV CCAP1H, A	
01A5	D0D0	461	POP PSY	
01A7	D0D0	462	POP ACC	
01A9	32	463	RETI	
		464		
01AA	D54212	465	RCV_BYTE_1: DJNZ RCV_COUNT_1, RCV_DATA_1	
		466		
01AD	309428	467	RCV_STOP_1: JNB P1.4, ERROR_1	
01B0	854140	468	MOV RCV_BUF_1, RCV_REG_1	
01B3	D209	469	SETB RCV_DORE-1	
01B5	D28F	470	SETB TF1	
01B7	75DB11	471	MOV CCAPM1, #NEG_EDGE	
01BA	D0D0	472	POP PSY	
01BC	D0D0		POP ACC	



UCS-51 MACRO ASSEMBLER SWPORT

01/01/80 PAGE 1

LOC	OBJ	LINE	SOURCE
01BE	32	413	RETI
		474	
01BF	A294	475	RCV_DATA_1: MOV C, P1.4
01C1	E541	476	MOV A, RCV_REG_1
01C3	15	477	RRC A
01C4	F541	478	MOV RCV_REG_1, A
		479	;
01C6	C3	480	CLR C
01C7	742C	481	MOV A, #FULL_BIT-LOW
01C9	25EB	482	ADD A, CCAP1L
01CB	F5EB	483	MOV CCAP1L, A
01CD	7402	484	MOV A, #FULL_BIT-HIGH
01CF	35FB	485	ADDC A, CCAP1H
0101	F5FB	486	MOV CCAP1H, A
0103	D0D0	487	POP PSW
01D5	D0E0	488	POP ACC
01D7	32	489	RETI
		490	
01D8	C2B6	491	ERROR_1: CLR P3.6
01DA	75DB11	492	MOV CCAPM1, #NEG_EDGE
01DD	C208	493	CLR RCV_START_BIT_1
01DF	D0D0	494	POP PSW
01E1	D0E0	495	POP ACC
01E3	32	496	RETI
		497	;
		498	;
		499	;
		500	CHANNEL 2
		501	-----
		502	;
		503	
01E4	C7DA	504	MODULE_2: CLR CCF2
01E6	F5DC	505	MOV A, CCAPM2
01E8	541F	506	ANL A, #01111111B
01EA	B41115	507	CJNE A, #NEG_EDGE, RCV_START_2
		508	;
01ED	C3	509	CLR C
01EE	7415	510	MOV A, #HALF_BIT-LOW
01F0	25EC	511	ADD A, CCAP2L
01F2	F5EC	512	MOV CCAP2L, A
01F4	7401	513	MOV A, #HALF_BIT-HIGH
01F6	35FC	514	ADDC A, CCAP2H
01F8	F5FC	515	MOV CCAP2H, A
01FA	75DC49	516	MOV CCAPM2, #S_W_TIMER
01FD	D0D0	517	POP PSW
01FF	D0E0	518	POP ACC
0201	32	519	RETI
		520	
0202	B4494B	521	RCV_START_2: CJNE A, IS_W_TIMER, ERROR_2
0205	20101A	522	JB RCV_START_BIT_2, RCV_BYTE_2
0208	209545	523	JB P1.5, ERROR_4
		524	;
020B	0210	525	SETB RCV_START_BIT_2
020D	755209	526	MOV RCV_COUNT_2, #09H
		527	;

270531-17

LOC	OBJ	LINE	SOURCE
0210	G3	528	CLR C
0211	742C	529	UOV A, IFULL BIT-LOU
0213	25EC	530	ADD A, CCAP2L
0215	F5EC	531	MOV CCAP2L, A
0211	7402	532	MOV A, IFULL BIT HIGH
0219	35FC	533	ADDC A, CCAP2H
021B	F5FC	534	MOV CCAP2H, A
0210	D0D0	535	POP PSW
021F	D0E0	536	POP ACC
0221	32	537	RETI
0222	D55212	538	;
		539	RCV_BYTE_2: DJNZ RCV_COUNT_2, RCV_DATA_2
		540	;
0225	309528	541	RCV_STOP_2: JNB P1.5, ERROR_2
0220	855150	542	MOV RCV_BUF_2, RCV_REG_2
022B	D211	543	SETB RCV_DONE-2
0220	D28F	544	SETB TF1
022F	75DC11	545	UOV CCAPM2, INEG_EDGE
0232	D0D0	546	POP PSW
0234	DGE0	547	POP ACC
0236	32	548	RETI
		549	;
0231	A295	550	RCV_DATA_2: MOV C, P1.5
0239	E551	551	UOV A, RCV_REG_2
023B	13	552	RRC A
023C	F551	553	UOV RCV_REG-2, A
023E	G3	554	CLR C
023F	742C	555	UOV A, IFULL BIT-LOU
0241	25EC	556	ADD A, CCAP2L
0243	F5FC	557	MOV CCAP2L, A
0245	7402	558	MOV A, IFULL BIT HIGH
0241	35FC	559	ADDC A, CCAP2H
0249	F5FC	560	UOV CCAP2H, A
024B	D0D0	561	POP PSY
024D	D0E0	562	POP ACC
024F	32	563	RETI
		564	;
0250	C2B7	565	ERROR_2: CLR P1.7
0252	75DC11	566	MOV CCAPM2, INEG_EDGE
0255	C210	567	CLR RCV_START-BIT-2
0251	D0D0	568	POP PSW
0259	D0E0	569	POP ACC
025B	32	570	RETI
		571	;
		572	;
		573	;
		574	;
		575	;; This routine simulates the 'R1' interrupt. When a byte is received on one
		576	;; of the channels, this interrupt is generated. Bits are set so the main
		577	;; routine knows which channel received a byte.
		578	;;
		579	;;
025C	C0B0	580	RECEIVE_DONE: PUSH ACC
025E	C0D0	581	PUSH PSW
0260	C28F	582	CLR TF1

## MCS-51 MACRO ASSEMBLER SWPORT

```

LOC  OBJ      LINE      SOURCE
0262 300106    583      JNB RCV_DONE_0, RCV_1      ; Check which module received a byte
0263 C201      584      CLR RCV_DONE_0              ; Clear flags needed for next reception
0264 C200      585      CLR RCV_START_BIT_0      ; Tell main routine which channel received
0265 D202      586      SETB RCV_ON_0              ; a byte
0266 303906    588      JNB RCV_DONE_1, RCV_2      ; Check which module received a byte
0267 C203      589      CLR RCV_DONE_1              ; Clear flags needed for next reception
0268 C208      590      CLR RCV_START_BIT_1      ; Tell main routine which channel received
0269 D20A      591      SETB RCV_ON_1              ; a byte
0270 301006    593      JNB RCV_DONE_2, RETURN      ; Check which module received a byte
0271 C211      594      CLR RCV_DONE_2              ; Clear flags needed for next reception
0272 D210      595      CLR RCV_START_BIT_2      ; Tell main routine which channel received
0273 D212      596      SETB RCV_ON_2              ; a byte
0274 0000      598      POP PSM                      ; Return
0275 D050      599      POP ACC                      ; Return
0276 D050      600      RETI
0281 32        601      ;
0282        602      ;
0283        603      ;
0284        604      ;
0285        605      ;
0286        606      ;
0287        607      ;
0288        608      ;
0289 E599      609      ; When a byte is received on the full-duplex serial port, it is then
0290        610      ; transmitted back to a "dummy" terminal. This terminal checks that the
0291 D050      611      ; byte it transmitted to the PCA is the same value it receives back.
0292 C050      612      SERIAL_PORT_INTERRUPT
0293 C000      613      ;
0294 C000      614      ;
0295        615      ;
0296 E599      616      ; SERIAL_PORT:
0297 C298      617      PUSH ACC
0298 C298      618      JNB RI_TXM              ; Check whether RI or TI
0299 E599      619      MOV A, SBUF              ; caused the interrupt
0300 C298      620      CLR RI
0301 D050      621      MOV SBUF, A
0302 C298      622      POP ACC
0303 D050      623      RETI
0304 C293      624      ;
0305 D050      625      ;
0306 D050      626      ;
0307 D050      627      ;
0308 32        628      END

```

REGISTER BANK(S) USED: 0

ASSEMBLY COMPLETE, NO ERRORS FOUND

MCS-51 MICRO ASSEMBLER SWPORT

01/01/80 PAGE 1

DOS 3.20 (038-W) MCS-51 MACRO ASSEMBLER, V2.2  
 OBJECT MODULE PLACED IN SWPORT.OBJ  
 ASSEMBLER INVOKED BY: C:\AEDIT\ASM51.EXE SWPORT.TR

LOC	OBJ	LINE	SOURCE
		1	\$NOMOD51
		2	\$NOSYMBOLS
		3	\$NOLIST
		152	;
		153	;
		154	; This program tests the transmit routines for the software serial port.
		155	; To initialize the first transmission, the compare values are loaded before
		156	; the PCA timer is started. Successive interrupts are generated every bit
		157	; time by the software timer.
		158	;
		159	; For test purposes, the data transmitted increments from 00 to FF her
		160	; "Dummy" terminals receive these bytes and display the bytes as they
		161	; are incremented.
		162	;
		163	;
0000		164	ORG 00H
0000	020036	165	LJMP INIT_TXM
		166	;
0023		161	ORG 0023H
0023	02014B	168	LJMP SERIAL-PORT ; Serial port interrupt
		169	;
0033		170	ORG 0033H
0033	0200D0	171	LJMP TRANSMIT ; PCA software timer interrupt
		172	;
		173	;
		174	;
		175	;
		176	;
			VARIABLES USED BY THE SOFTWARE SERIAL PORT
			-----
0003		177	TXM_START_BIT_0 BIT 20H.3 ; Indicates start bit has been
000B		178	TXM_START_BIT_1 BIT 21H.3 ; transmitted
0013		179	TXM_START_BIT_2 BIT 22H.3
		180	;
0004		181	TXM_IN_PROGRESS_0 BIT 20H.4 ; Indicates transmit is in progress
000C		182	TXM_IN_PROGRESS_1 BIT 21H.4
0014		183	TXM_IN_PROGRESS_2 BIT 22H.4
		184	;
0034		185	TXM_BUF_0 DATA 34H ; Software transmit "SBUF"
0044		186	TXM_BUF_1 DATA 44H
0054		187	TXM_BUF_2 DATA 54H
		188	;
0035		189	TXM_REG_0 DATA 35H ; Tempordry register for
0045		190	TXM_REG_1 DATA 45H ; transmitting bits
0055		191	TXM_REG_2 DATA 55H
		192	;
0036		193	TXM_COUNT_0 DATA 36H ; Counter for transmitting bits
0046		194	TXM_COUNT_1 DATA 46H
0056		195	TXM_COUNT_2 DATA 56H
		196	;
0031		197	DATA_0 DATA 37H ; Register used for the test
0047		198	DATA_1 DATA 47H ; program

270531-20

LOC	ORG	LINE	SOURCE	DATA 2	DA A	5/H	
0057		199			DA A	5/H	
0049		200	\$M_TIMER		EQ	49H	; Software timer mode for
002C		202	FULL_BIT LOW		EQ	2CH	; compare/capture module
0002		204	FULL_BIT HIGH		EQ	02H	; full bit time - 22CH
		205					; 7400 baud at 16 Mhz
		206					
		208					
0036 75815F		209	INIT TMR:		INITIALIZATION		
		210			=====		
0039 7589D0		211		MOV SP, #5F0			; Compatible with receive routines
003E 7589D0		212		MOV CMO, #00H			; Increment PCA bit rate (40K/12 osc. per bit)
003F 7589D0		213		MOV CCN, #00H			; Clear all status flag
0042 7589D0		214		MOV CH, #00H			
0045 75D019		215		MOV CL, #00H			
		216		MOV CCAPM3, #5W_TIMER			; Mode3 = 0 configured a software timer
0048 75ABD8		217		MOV E, #008H			; Initial size of needed interrupts
		218					
004B 759850		219		MOV SCN, #50H			
004E 75C8F7		220	INIT_SP:	MOV RCAP2H, #00FH			; Serial port in mode 1 (8-bit UART)
0051 75C8C0		221		MOV RCAP2L, #00CH			; Reload values for 4600 baud @ 16 M
0054 75C834		222		MOV TZCON, #34H			; Timer 2 as a baud-rate generator
		223					; turn timer 2 on
		224					
0057 C203		225					
0059 C208		226	INIT_FLAGS:	CLR TMR_START_ELT 0			
005B C213		227		CLR TMR_START_ELT 2			
		228					
005D C204		229		CLR TMR_IN_PROGRESS 0			
005F C20C		230		CLR TMR_IN_PROGRESS-1			
0061 C214		231		CLR TMR_IN_PROGRESS-2			
		232					
0063 753400		233		MOV TMR_BUF 0, #00H			
0066 754400		234		MOV TMR_BUF-1, #00H			
0069 755400		235		MOV TMR_BUF-2, #00H			
		236					
006F 753500		237		MOV TMR_REC 0, #00H			
006F 754500		238		MOV TMR_REC-1, #00H			
0072 755500		239		MOV TMR_REC-2, #00H			
		240					
0075 753600		241		MOV *XK_COUNT 0, #00H			
0075 753600		242		MOV *XK_COUNT-1, #00H			
007B 753600		243		MOV *XK_COUNT-2, #00H			
		244					
007E 7537FF		245		MOV DATA 0, #EH			
0081 7547FF		246		MOV DATA 1, #EH			
0084 7557FF		247		MOV DATA 2, #EH			
		248					
0087 758D2C		249		MOV CCAP3L, #0H			; Cause the first software timer
008A 758D02		250					; Interrupt one bit time after
00BD 00DE		251		SETB CR			; PCA timer is started
		252					

01/01/80 PAGE 3

270531-22

MCS > | MACRO ASSEMBLER

PR OUT

```

LOC OBJ      LINE      SOURCE
00E3 053607    309      TXM_BYTE_0: DJNZ TXM_COUNT_0, TXM_DATA_0
00E6 0282     310      TXM_STOP_0:  SEB P3.2
00E8 C204     311      CLR TXM_IN_PROGRESS_0
00EA 0200F7   312      JMP TXM_EXIT
00ED E535     313      TXM_BYTE 1:  DJNZ TXM_COUNT_1, TXM_DATA_1
00EF 13      314      MOV A, TXM_REG_0
00F0 2A2     315      RRC A, 2, C
00F2 2A2     316      MOV TXM_REG_0, A
00F4 0200F7   317      JMP TXM_EXIT
00F7 300C1E   318      TRANS IT 1
00FA 20807    319      JNB TXM_IN_PROGRESS_1, TRANS IT
00FC C283     320      CLR P3.3
00FF 0208     321      SETB TXM_START_BIT_1
0101 020118   322      JMP TXM_EXIT_2
0104 054607   323      TXM_BYTE 1:  DJNZ TXM_COUNT_1, TXM_DATA_1
0107 0283     324      TXM_STOP 1:  SETB TXM_START_BIT_1
0109 C20C     325      CLR TXM_IN_PROGRESS_1
010B 020118   326      JMP TXM_EXIT_2
010E E545     327      TXM_BYTE 1:  DJNZ TXM_COUNT_1, TXM_DATA_1
0110 13      328      MOV A, TXM_REG_0
0111 2A3     329      RRC A, 3, C
0113 2A3     330      MOV TXM_REG_0, A
0115 020118   331      JMP TXM_EXIT_2
0118 30141E   332      TRANS IT 2
011B 201307   333      JNB TXM_IN_PROGRESS_2, TXM_EXIT
011E C214     334      CLR P3.4
0120 0213     335      SETB TXM_START_BIT_2
0122 020139   336      JMP TXM_EXIT
0125 055607   337      TXM_BYTE 2:  DJNZ TXM_COUNT_2, TXM_DATA_2
0128 0284     338      TXM_STOP 2:  SETB P3.4
012A C214     339      CLR TXM_IN_PROGRESS_2
012C 020139   340      JMP TXM_EXIT
012F E555     341      TXM_BYTE 2:  MOV A, TXM_REG_2
0131 13      342      RRC A
0132 2A84     343      MOV P3.4, C
0134 E555     344      MOV TXM_REG_2, A
0136 020139   345      JMP TXM_EXIT

```



## DOMESTIC SALES OFFICES

### ALABAMA

Intel Corp  
5015 Bradford Dr #2  
Huntsville 35805  
Tel (205) 830 4010  
FAX (205) 837 2640

### ARIZONA

Intel Corp  
11225 N 28th Dr  
Suite D214  
Phoenix 85029  
Tel (602) 869 4980  
FAX (602) 869 4294

Intel Corp  
7225 N Mena Lisa Rd  
Suite 205  
Tel (602) 544 0221  
FAX (602) 544 0212

### CALIFORNIA

Intel Corp  
21515 Vanowen Street  
San Diego Park 91303  
Tel (818) 704 8500  
FAX (818) 340 1144

Intel Corp  
2250 E Imperial Highway  
Brea 92604  
Tel (213) 640 6040  
FAX (213) 640 7133

Intel Corp  
1 Sierra Gale Plain  
Suite 280C  
Roseville 95678  
Tel (916) 782 8086  
FAX 19161 782 8153

Intel Corp  
9665 Chesapeake Dr  
Suite 325  
San Diego 92123  
Tel (619) 292 8086  
FAX (619) 292 0626

Intel Corp  
400 N Tustin Avenue  
Suite 450  
Santa Ana 92705  
Tel (714) 835 9642  
TWX 910555 1114  
FAX (714) 541 9157

Intel Corp  
San Tomas 4  
2700 San Tomas Expressway  
2nd Floor  
Santa Clara 95051  
Tel 14081 986 8086  
TWX 910 338 0255  
FAX 14081 727 2620

### COLORADO

Intel Corp  
4445 Northpark Drive  
Colorado Springs 80907  
Tel (719) 594 6622  
FAX 13031 594 0720

Intel Corp  
650 S Cherry St  
Suite 915  
Denver 80222  
Tel 13031 321 8086  
TWX 910 931 2289  
FAX 13031 322 8675

### CONNECTICUT

Intel Corp  
301 Lee Farm Corporate Park  
83 Woodlee Heights Rd  
Danbury 06810  
Tel (203) 748 3300  
FAX (203) 794 0339

### FLORIDA

Intel Corp  
6363 N.W. 6th Way  
Suite 100  
Ft. Lauderdale 33309  
Tel (305) 771 0600  
TWX 510 956 9407  
FAX (305) 772 8193

Intel Corp  
5850 T.G. Lee Blvd  
Suite 340  
Orlando 32822  
Tel (407) 240 8000  
FAX 14071 240 8097

Intel Corp  
10000 4th Street North  
Suite 170  
St. Petersburg 33716  
Tel (813) 577 2413  
FAX (813) 578 1607

### GEORGIA

Intel Corp  
20 Technology Parkway, N.W.  
Suite 150  
Norcross 30092  
Tel (404) 449 0541  
FAX (404) 695 9762

### ILLINOIS

Intel Corp  
300 N. Mantingale Road  
Suite 400  
Schaumburg 60173  
Tel 17081 605 8031  
FAX (708) 706 9762

### INDIANA

Intel Corp  
8777 Purdue Road  
Suite 125  
Indianapolis 46268  
Tel (317) 875 0623  
FAX (317) 875 9938

### IOWA

Intel Corp  
1930 St. Andrews Drive N.E.  
2nd Floor  
Cedar Rapids 52402  
Tel (319) 393 1294

### KANSAS

Intel Corp  
10985 Cody St  
Suite 140 Bldg D  
Overland Park 66210  
Tel 19131 345 2727  
FAX (913) 345 2076

### MARYLAND

Intel Corp  
10010 Junction Dr  
Suite 200  
Annapolis Junction 20701  
Tel (301) 206 2960  
FAX (301) 206 3677  
(301) 206 3678

### MASSACHUSETTS

Intel Corp  
5540 Centerville Dr  
Westford 01876  
Tel (919) 851 9537  
FAX 19191 851 8974

### MICHIGAN

Intel Corp  
2071 Orchard Lake Road  
Suite 100  
West Bloomfield 48122  
Tel (313) 951 8086  
FAX (313) 851 8770

### MINNESOTA

Intel Corp  
3500 W. 80th St  
Suite 360  
Bloomington 55431  
Tel (612) 835 6722  
TWX 910 576 2867  
FAX (612) 831 6491

### MISSOURI

Intel Corp  
4203 Earth City Expressway  
Suite City 63045  
Tel (314) 291 1990  
FAX (314) 291 4341

### NEW JERSEY

Intel Corp  
Parkway 109 Office Center  
328 Newman Springs Road  
Red Bank 07701  
Tel (201) 747 2233  
FAX (201) 747 0983

Intel Corp  
280 Corporate Center  
75 Livingston Avenue  
First Floor  
Roseland 07068  
Tel (201) 740 0111  
FAX (201) 740 0625

### NEW YORK

Intel Corp  
850 Cross Keys once Park  
Farpoint 14450  
Tel (716) 425 2750  
TWX 5102537391  
FAX (716) 223 2561

Intel Corp  
2950 Expressway Lr South  
Suite 130  
Iscanah 11722  
Tel (516) 231 3300  
TWX 510 227 6236  
FAX (516) 348 7939

Intel Corp  
Westgate Business Center  
Bldg 300 Route 9  
Fishkill 12524  
Tel (914) 897 3860  
FAX (914) 897 3125

### NORTH CAROLINA

Intel Corp  
5800 Executive Center Dr  
Shawnee 28212  
Tel (704) 568 8966  
FAX 17041 535 2235

Intel Corp  
5540 Centerville Dr  
Westford 01876  
Tel (919) 851 9537  
FAX 19191 851 8974

### OHIO

Intel Corp  
3401 Park Center Drive  
Suite 220  
Dayton 45414  
Tel (513) 890 5350  
TWX 810 450 2528  
FAX (513) 890 8658

Intel Corp  
25700 Science Park Dr  
Suite 100  
Beachwood 44122  
Tel 12161 464 7736  
TWX 810427 9298  
FAX (804) 282 0673

### OKLAHOMA

Intel Corp  
6801 N. Broadway  
Owasso 73162  
Tel (405) 848 8086  
FAX (405) 840 9811

### PENNSYLVANIA

Intel Corp  
455 Pennsylvania Avenue  
Suite 230  
Fort Washington 19034  
Tel (215) 641 1000  
TWX 510661 2677  
FAX 12151 641 0795

Intel Corp  
400 Penn Center Blvd  
Suite 610  
Pittsburgh 15235  
Tel 14121 823 4370  
FAX 14121 829 7578

### PUERTO RICO

Intel Corp  
South Industrial Park  
P.O. Box 910  
Las Piedras 00671  
Tel (809) 733 8616

### TEXAS

Intel Corp  
6911 Capital of Texas Hwy  
Austin 78759  
Tel (512) 794 8086  
FAX (512) 338 9335

Intel Corp  
12000 Ford Road  
Suites 100234  
Tel (214) 241 8087  
FAX (214) 484 1180

Intel Corp  
7322 S.W. Freeway  
Suite 1490  
Houston 77074  
Tel (713) 988 8085  
TWX 910 881 2490  
FAX (713) 988 3660

### UTAH

Intel Corp  
428 East 6400 South  
Suite 104  
Murray 84107  
Tel (801) 263 8051  
FAX (801) 268 1457

### VIRGINIA

Intel Corp  
1504 Santa Rosa Road  
Suite 108  
Richmond 23288  
Tel 18041 282 5668  
FAX 12161 464 2270

### WASHINGTON

Intel Corp  
155 108th Avenue NE  
Bellevue 98004  
Tel 12061 453 8086  
TWX 910 443 3002  
FAX (206) 451 9556

Intel Corp  
408 N. Millan Road  
Suite 102  
Spokane 99206  
Tel (509) 928 8086  
FAX 15091 928 9467

### WISCONSIN

Intel Corp  
330 S. Executive Dr  
Bromfield 53005  
Tel (414) 784 8087  
FAX (414) 796 2115

## CANADA

### BRITISH COLUMBIA

Intel Semiconductor of  
Canada Ltd  
4585 Canada Way  
Suite 202  
Burnaby V5G 4L6  
Tel 16041 298 0387  
FAX 16041 298 8234

### ONTARIO

Intel Semiconductor of  
Canada Ltd  
2650 Queensview Drive  
Suite 250  
Ottawa K2B 8H6  
Tel (613) 829 9714  
FAX (613) 820 5936

Intel Semiconductor of  
Canada Ltd  
190 Attwell Drive  
Suite 500  
Lexdale M9W 6H8  
Tel (416) 675 2105  
FAX (416) 675 2138

### QUEBEC

Intel Semiconductor of  
Canada Ltd  
620 St Jean Boulevard  
Pointe Claire H9R 3K2  
Tel (514) 694 9130  
FAX 514 694 0064





## EUROPEAN SALES OFFICES

### DENMARK

Intel Denmark A/S  
Gienlevvej 61 3rd Floor  
2400 Copenhagen NV  
Tel: (45) (31) 19 80 33  
TLX 19567

### FINLAND

Intel Finland OY  
Ruusokalle 2  
00900 Helsinki  
Tel: (358) 0 544 644  
TLX 123332

### FRANCE

Intel Corporation S A R L  
1 Rue Edison BP 303  
78054 St. Quentin en Yvel  
France  
Tel: (33) (1) 30 57 70 00  
TLX 69901b

### WEST GERMANY

Intel Semiconductor GmbH\*  
Dornacher Strasse 1  
8016 Feldkirchen bei Muenchen  
Tel: (49) 089 90992 0  
TLX 5 23177

Intel Semiconductor GmbH  
Hohenzollern Strasse 5  
3000 Mannheim 1  
Tel: (49) 0511 344081  
TLX 8 23621

Intel Semiconductor GmbH  
Abraham Lincoln Strasse 16 18  
6200 Wiesbaden  
Tel: (49) 06121 7605 0  
TLX 4 186183

Intel Semiconductor GmbH  
Zetterschlag 10A  
7000 Stuttgart 80  
Tel: (49) 0711 7287 280  
TLX 7 254826

### ISRAEL

Intel Semiconductor Ltd.\*  
Aldim Industrial Park Neve Shareit  
P.O. Box 43202  
Tel Aviv 61430  
Tel: (972) 3 548 3222  
TLX 371215

### ITALY

Intel Corporation Italia S.p.A.\*  
Miranlon Palazzo E  
20090 Assago  
Milano  
Tel: (39) (02) 89'00950  
TLX 341286

### NETHERLANDS

Intel Semiconductor B.V.\*  
Postbus 84130  
3099 CC Rotterdam  
Tel: (31) 10 407 11 11  
TLX 22283

### NORWAY

Intel Norway A/S  
Hvamveien 4 PO Box 92  
2013 Skjetten  
Tel: (47) 161 847 420  
T U 78018

### SPAIN

Intel Iberia S.A.  
Zurbano, 28  
28010 Madrid  
Tel: (34) (1) 308 25 52  
TLX 46880

### SWEDEN

Intel Sweden A.B.\*  
Drottning 24  
171 36 Solna  
Tel: (46) 8 734 01 00  
TLX 12261

### SWITZERLAND

Intel Semiconductor A.G.  
Zuerichstrasse  
8185 Winkel Ruehli bei Zuerich  
Tel: (41) 01 860 62 62  
TLX 825477

### UNITED KINGDOM

Intel Corporation (U.K.) Ltd.\*  
Pipers Way  
Swindon Wiltshire SN3 1RJ  
Tel: (44) (0793) 696000  
TLX 4444478

## EUROPEAN DISTRIBUTORS/REPRESENTATIVES

### AUSTRIA

Bacher Electronics GmbH  
Rosenmuhlgasse 26  
1120 Wien  
Tel: (43) (02221) 83 56 46  
TLX 31532

### BELGIUM

Intelco Belgium S.A.  
Av. des Croix de Guerre 94  
1120 Bruxelles  
Oortlogskrusentlaan 94  
1120 Brussel  
Tel: (32) (02) 216 01 60  
TLX 64475 or 22090

### DENMARK

ITT Multikomponent  
Naveiland 29  
2600 Glostrup  
Tel: (45) (0) 2 45 66 45  
TLX 33 355

### FINLAND

OY Finfronic AB  
Meikonkatu 244  
00210 Helsinki  
Tel: (358) (0) 6926022  
TLX 124224

### FRANCE

Almex  
Zone Industrielle a Antony  
48 rue de l'Aubepine  
BP 66 Antony cedex  
Tel: (33) (1) 46 56 21 12  
TLX 250067

Jermyn Gengier  
60 rue des Gemeaux  
94655 Vincennes cedex  
Tel: (33) (1) 49 78 49 78  
TLX 261586

Metrologie  
Tour d'Asnieres  
4 av. Laurent Celvy  
92606 Asnieres Cedex  
Tel: (33) (1) 47 30 62 40  
TLX 611448

Tekelac Antronic  
Cite des Bruyeres  
Rue care Verneil BP 2  
92310 Sevres  
Tel: (33) (1) 45 34 75 35  
TLX 20156

### WEST GERMANY

Electronic 2030 AG  
Starkgruberring 12  
8000 Muenchen 82  
Tel: (49) 089 42001 0  
TLX 522561

ITT Multikomponent GmbH  
Postfach 1265  
Bahnhofstrasse 44  
7141 Moeglingen  
Tel: (49) 07141 4879  
TLX 7264472

Jermyn GmbH  
Im Dachstuhl 9  
6250 Limburg  
Tel: (49) 06431 508 0  
TLX 415257 0

Metrologie GmbH  
Meggingsstrasse 49  
8000 Muenchen 71  
Tel: (49) 089 78042 0  
TLX 5213189

Proelction Vertriebs GmbH  
Mar Planck Strasse 13  
6072 Dietrich  
Tel: (49) 06103 30434 3  
TLX 417903

### IRELAND

Micro Marketing Ltd  
Glengary Office Park  
Glengary  
Co. Dublin  
Tel: (21) (353) (01) 85 63 25  
TLX 31564

### ISRAEL

Esatronics Ltd  
11 Rozans Street  
P.O. Box 39300  
Tel Aviv 61392  
Tel: (972) 03 475151  
TLX 33638

### ITALY

Intelco  
Divisione ITT Industries GmbH  
Viale Milanofori  
Palazzo E 5  
20090 Assago (MI)  
Tel: (39) 02 824 01  
TLX 311351

Las. Elettronica S.p.A.  
V.le Fulvio Testi 126  
20090 Cinisello Balsamo (MI)  
Tel: (39) 02 2440012  
TLX 352040

Telcom S.p.A.  
Via M. Civitali 75  
20148 Milano  
Tel: (39) 02 4049046  
TLX 335654

ITT Multikomponents  
Viale Milanofori E 5  
20090 Assago (MI)  
Tel: (39) 02 824701  
TLX 311351

Silverstar  
Via Dei Gracchi 20  
20146 Milano  
Tel: (39) 02 49961  
TLX 332189

### NETHERLANDS

Koning en Houtman Elektrotechniek  
B.V.  
Energieweg 1  
Tel: (31) (0) 15 609906  
TLX 38250

### NORWAY

Nordisk Elektronikk (Norge) A/S  
Postboks 123  
Smidsvingen 4  
1364 Hvalstad  
Tel: (47) (02) 84 102 10  
TLX 77546

### PORTUGAL

ATD Portugal LDA  
Rua Dos Lusitãos 5 Sala B  
1300 Lisboa  
Tel: (35) (1) 64 80 91  
TLX 61562

Ditram  
Avenida Miguel Bombarda 133  
1000 Lisboa  
Tel: (35) (1) 54 53 13  
TLX 14182

### SPAIN

ATD Electronica S.A.  
Plaza Ciudad de Viena 6  
28040 Madrid  
Tel: (34) (1) 234 40 00  
TLX 42477

ITT SESA  
Calle Miguel Angel 21 3  
28010 Madrid  
Tel: (34) (1) 419 09 57  
TLX 27461

Metrologia Iberica S.A.  
C/ra de Fuenferraz 180  
28100 Alcobendas (Madrid)  
Tel: (34) (1) 653 86 11

### SWEDEN

Nordisk Elektronik AB  
Torshamnsgatan 39  
Box 36  
164 33 Nista  
Tel: (46) 08 03 46 30  
TLX 105 47

### SWITZERLAND

Industrie A.G.  
Herdistrasse 31  
8304 Walsellen  
Tel: (41) (01) 8328111  
TLX 56788

### TURKEY

Intelco Elektronik  
Ulumustu Caddesi 95A  
8000 Muenchen 2  
Tel: (49) 083 53 80 570  
TLX 528573

### UNITED KINGDOM

Accent Electronic Components Ltd  
Jubilee House Jubilee Road  
Leitchwood Herts SG6 1TL  
Tel: (44) (0462) 460666  
TLX 826293

Bytech Conway Systems  
3 The Western Centre  
Western Road  
Blackwell RG12 1RW  
Tel: (44) (0344) 55333  
TLX 847201

Jermyn  
vestry Estate  
Oxford Road  
Sevenoaks  
Kent TN14 5EJ  
Tel: (44) (0732) 450144  
TLX 95142

MMD  
Urn 8 Southview Park  
Caversham  
Berkshire RG4 0AF

Tel: (44) (0734) 481695  
TLX 846669

Rapid Silicon  
Rapid House  
Denmark Street  
High Wycombe  
Buckinghamshire HP11 2EH  
Tel: (44) (0494) 442266  
TLX 837931

Rapid Systems  
Rapid House  
Denmark Street  
High Wycombe  
Buckinghamshire HP11 2ER  
Tel: (44) (0494) 460244  
TLX 837931

### YUGOSLAVIA

H.R. Microelectronics Corp  
2005 de a Cruz Blvd Ste 223  
Santa Clara CA 95050  
Tel: (41) (408) 988 0286  
TLX 387452

Rapido Electronic Components  
S.p.A.  
Via C. Beccaria, 8  
34133 Trieste  
Italia  
Tel: (39) 040 360555  
TLX 460461



## INTERNATIONAL SALES OFFICES

### AUSTRALIA

Intel Australia Pty Ltd \*  
Spectrum Building  
200 Pacific Hwy Level 6  
Crows Nest NSW 2065  
Tel 612 957 2744  
FAX 612-923 2632

### BRAZIL

Intel Semicondutores do Brasil LTDA  
Av. Paulista 1159 CJS 404 405  
01311 São Paulo SP  
Tel 55 11 287 5899  
TLX 391153146/ISDB  
FAX 55 11 2875119

### CHINA/HONG KONG

Intel PRC Corporation  
15/F Office 1 Citic Bldg  
Jian Guo Men Wa Street  
Beijing PRC  
Tel (1) 500 4850  
TLX 22947 INTEL CN  
FAX (1) 5002953

Intel Semiconductor Ltd \*  
10/F East Tower  
Bond Center  
Queensway Central  
Hong Kong  
Tel 8521 844 4555  
FAX 18521 868 1989

### INDIA

Intel Asia Electronics Inc  
42 Saman Plaza  
St Marks Road  
Bangalore 560001  
Tel 011 91 612 215065  
TLX 9538452875 DCBY  
FAX 091 8122215067

### JAPAN

Intel Japan K.K.  
5-6 Tokodai Tsukuba-shi  
Ibaraki 300 26  
Tel 0298 47 8511  
TLX 3656 160  
FAX 0298 47 8450

Intel Japan K.K.\*  
Daichi Mitsugi Bldg  
1 8889 Fuchu-cho  
Fuchu-shi Tokyo 183  
Tel 0423 60 7871  
FAX 0423 60 0315

Intel Japan K.K.\*  
2 Bldg Kumagaya  
2 69 Hon-cho  
Kumagaya-shi Saitama 360  
Tel 0485 24 6871  
FAX 0485 24 7518

### Intel Japan K.K.\*

Mitsui Seimei Musashi Kosugi Bldg  
91 Shinmaruko Nakahara-ku  
Kawasaki-shi Kanagawa 211  
Tel 044 733 7011  
FAX 044 733 7010

Intel Japan K.K.  
Nilson Seime Alsiug Bldg  
1-2-1 Asahi-machi  
Atsugi-shi Kanagawa 243  
Tel 0462 29 3731  
FAX 0162 29 3781

Intel Japan K.K.\*  
Ryokuchi Ek Bldg  
2-4-1 Terauchi  
Toyonaka-shi Osaka 560  
Tel 06 863 1091  
FAX 06 863 1084

Intel Japan K.K.  
Shinnaru Bldg  
1-1 Marunouchi  
Chiyoda-ku Tokyo 100  
Tel 03 201 3621  
FAX 03 201 6850

Intel Japan K.K.  
Green Bldg  
1-6-20 Nishi-ku  
Naka-ku Nagoya-shi  
Aichi 450  
Tel 052 204 1261  
FAX 052 204 1265

### KOREA

Intel Technology Asia Ltd  
16th Floor Life Bldg  
61 Yido-dong Youngdeungpo-ku  
Seoul 150010  
Tel (2) 784 8186 8286 8386  
T U K28312 INTELKO  
FAX (2) 784 8096

### SINGAPORE

Intel Singapore Technology Ltd  
101 Thomson Road #21 05 06  
United Square  
Singapore 11330  
Tel 250 7811  
TLX 39921 INTEL  
FAX 250 9256

### TAIWAN

Intel Technology Far East Ltd  
8th Floor No. 205  
Bank Tower Bldg  
Tung Hua N Road  
Taipei  
Tel 886 2 716 9660  
FAX 886 2 717 2455

## INTERNATIONAL DISTRIBUTORS/REPRESENTATIVES

### ARGENTINA

Datsys S.R.L.  
Chacabuco 90 6 Piso  
1069 Buenos Aires  
Tel 54 1 334 7728  
FAX 54 1 334 1871

### AUSTRALIA

Email Electronics  
15 17 Hume Street  
Huntingdale 3166  
Tel 011 61 3 544 8244  
TLX AA 30899  
FAX 011 61 35438179

NSD Australia  
205 Middleborough Rd  
Box Hill Victoria 3128  
Tel 03 8900970  
FAX 03 8990819

### BRAZIL

Electra Microeletronica S.A.  
Rua Geraldo Flausina Gomes 78  
7 Andar  
04575 São Paulo SP  
Tel 55 11 534 9641  
TLX 55 11 54593 54591  
FAX 55 11 534 9424

### CHINA/HONG KONG

Novel Precision Machinery Co Ltd  
Flat D 70 Kingsford Ind Bldg  
Phase 1 26 Kwai Hai Street  
N.T. Kowloon  
Hong Kong  
Tel (852) 422 3222  
TWX 39114 JNMW HX  
FAX (852) 428 1602

### INDIA

Micronic Devices  
Arun Complex  
No. 65 D V C Road  
Basavanagudi  
Bangalore 560 004  
Tel 011 91 812600631  
011 91 812611 365  
TLX 9538458332 MDGB

### Micronic Devices

No. 516 5th Floor  
Swastik Chambers  
Son Trombar Road  
Chembur  
Bombay 400 071  
TLX 9531 171447 MDEV

### Micronic Devices

25 B 1st Floor  
Bada Bazaar Marg  
Old Rajinder Nagar  
New Delhi 110 060  
Tel 011 91 11 5723509  
011 91 11 589771  
TLX 031 63253 MUND IN

### Micronic Devices

6 3 348/12A Dwarakapuri Colony  
Hyderabad 500 482  
Tel 011 91 842 226748

### S&S Corporation

1587 Kooser Road  
San Jose CA 95118  
Tel 4081 978 6216  
TLX 820281  
FAX (408) 978 8635

### JAPAN

Asahi Electronics Co Ltd  
KMM Bldg 2 14 1 Asano  
Kokurakibiku  
Kitakyushu-shi 802  
Tel 093 511 6471  
FAX 093 551 7861

C Itoh Techno Science Co Ltd  
4 8 1 Dobashi Miyamae-ku  
Kawasaki-shi Kanagawa 213  
Tel 044 852 5121  
FAX 044 877 4268

Da Semicon Systems Inc  
Flower Hill Shinmachi Higashi-kan  
1 23 9 Shinmachi Setagaya-ku  
Tokyo 154  
Tel 03 439 1600  
FAX 03 439 1601

### Okaya Koki

2 4 18 Sakae  
Naka-ku Nagoya-shi 460  
Tel 052 204 2916  
FAX 052 204 2901

Rhyo Electro Corp  
Kowa Bldg  
1-12-22 Tsukagi  
Chuo-ku Tokyo 104  
Tel 03 546 5011  
FAX 03 546 5044

### KOREA

J Tek Corporation  
61 1 Floor Government Pension Bldg  
24 3 Yoido-dong  
Yongdeungpo-ku Seoul 150 010  
Tel 82 2 780 8039  
TLX 25299 KODIGI  
FAX 82 2 784 6591

Samsung Electronics  
150 Taepyeongri 2 KA  
Chungbuk Seoul 100 102  
Tel 82 2 751 3985  
TLX 27970 KORSST  
FAX 82 2 753 0967

### MEXICO

S&B Electronics Inc  
675 Palomar Street Bldg 4 Suite A  
Cula Vista CA 92011  
Tel (619) 585 3253  
TLX 28751 CBALL UR  
FAX (619) 585 8322

D zope SA  
Tunich 388 Fracc Ing San Antonio  
Acapulco  
C P 02760 Mexico D F  
Tel 52 5 561 3211  
TLX 177 3790 DICONE  
FAX 52 5 561 1279

P N S A de C V  
Ego Villa esq Ajusco s/n  
Cuernavaca Morelos  
Tel 52 73 13 9412  
FAX 52 73 17 5333

### NEW ZEALAND

Email Electronics  
36 Olive Road  
Penrose Auckland  
Tel 011 64 9 591 155  
FAX 011 64 9 592 681

### SINGAPORE

Electronic Resources Pte Ltd  
17 Harvey Road #04 01  
Singapore 1336  
Tel 283 0888  
TWX 56541 ERS  
FAX 2894327

### SOUTH AFRICA

Electronic Building Elements  
178 Erasmus Street (off Watermeyer Street)  
Meyerspark Pretoria 0184  
Tel 011 2712 803 7680  
FAX 011 2712 803 8294

### TAIWAN

Mico Electronics Corporation  
5 F 587 Ming Shen Earl Rd  
Taipei R.O.C.  
Tel 886 2 501 8231  
FAX 886 2 505 6609

### Serie

15 F 135 Section 2  
Chien Jue North Ha  
Taipei 10479 R.O.C.  
Tel (02) 5010055  
FAX (02) 5012521  
(02) 5058414

### VENEZUELA

P Benavides S A  
Añanes a Rio  
Residencial Kamarata  
Locales 4 AL 7  
La Candelaria Caracas  
Tel 58 2 974 6338  
TLX 28450  
FAX 58 2 572 3321



UNITED STATES, Intel Corporation  
3065 Bowers Ave., Santa Clara, CA 95051  
Tel: (408) 765-8080

JAPAN, INTEL Japan K.K.  
5-6 Tokodai, Tsukuba-shi, Ibaraki, 300-26  
Tel: 0298-47-8511

FRANCE, Intel Corporation S.A.R.L.  
1, Rue Edison, BP 303, 78054 Saint-Quentin-en-Yvelines Cedex  
Tel: (33) (1) 30 57 70 00

UNITED KINGDOM, Intel Corporation (U.K.) Ltd.  
Pipers Way, Swindon, Wiltshire, England SN3 1RJ  
Tel: (44) (0793) 696000

WEST GERMANY, Intel Semiconductor GmbH  
Dornacher Strasse 1  
8016 Feldkirchen bei Muenchen  
Tel: (49) 089/90992-0

HONG KONG, Intel Semiconductor Ltd.  
10/F East Tower, Bond Center, Queensway, Central  
Tel: (852) 844-4555

CANADA, Intel Semiconductor of Canada, Ltd.  
190 Attwell Drive, Suite 500  
Rexdale, Ontario M9W 6H8  
Tel: (416) 675-2105